

OL0119-G31 User Manual

version:1.0.22

Win-Global Technology






- □ OL0119 device introduction
- Set Location Permission
- ☐ Set Bluetooth And Storage Permission
- ☐ Connect to OL0119
- ☐ Change Device Name
- ☐ Login Password
- ☐ Change Password
- Set Timeout
- ☐ Set Parameter
- Measurement Page
- Save Data
- ☐ Device Parameters Modification
- Exit App
- EWS-Level
- WBGT classification and color-coding
- ☐ Beaufort scale



OL0119 device introduction

- The light matches the color range will continue to display When powered by USB.
- Battery Powered Mode (Factory Setting)
 The CO₂ concentration is within the range of the green light, the light is displayed every 60s.
 The CO₂ concentration is within the range of the yellow light, the light is displayed every 30s.
 The CO₂ concentration is within the range of the red light, the light is displayed every 15s.




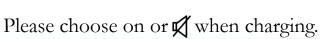




Continuous green light shows when charging.

Set Location Permission (1)

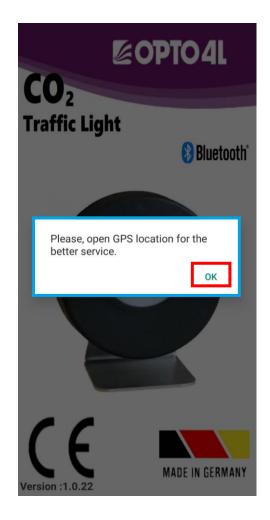

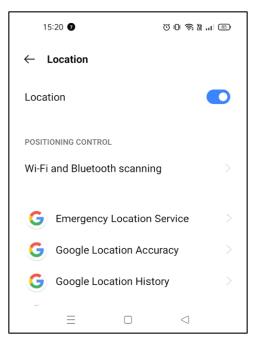

- If GPS function is not enabled, a popup window will appear.
 Please press the "OK" button.
- 2. After pressing the "OK" button, you will be taken to this page.


 Please enable GPS function.

Note: For device with Android 10 or higher version, GPS must be turned on for Bluetooth to work.




Set Location Permission (2)

1. When the location access permissions appear, select "Precise" and click "While using the app".

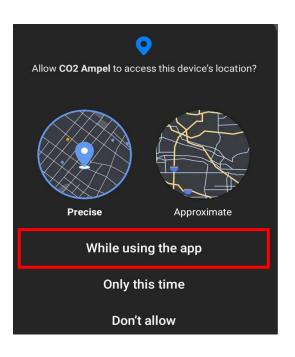


2. When location access appears, you should change to use "Precise" for GPS to turn on successfully.

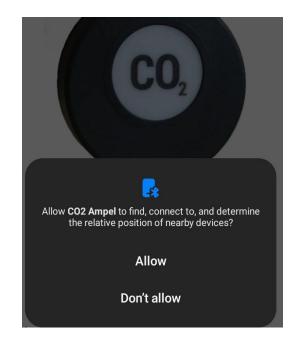




Set Bluetooth And Storage Permission

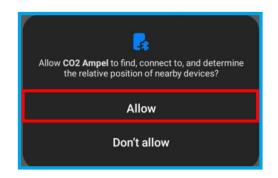

Please press the "Allow" option. (Bluetooth scan permission) [For Android 12 or higher]

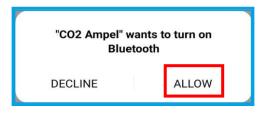


If Bluetooth function is not enabled, a pop-up window will appear. Please press the "Allow" option.



Please press the "Allow" option. (Storage permission) [For Android 10 and below]




Connect to OL0119

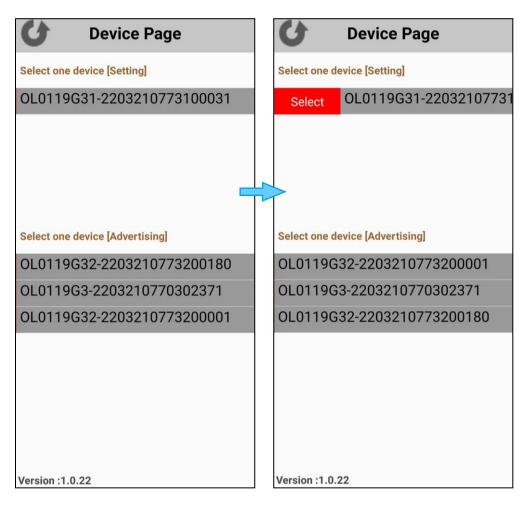

- 1. Swipe right on the selected OL0119 device. Then press the "Select" button to complete the selection action.
- 2. Select one device[Setting]:
 After pressing the "Select" button, the
 Change Device Name window will pop
 up. Then you will be taken to the login
 page.
- 3. Select one device[Advertising]:
 After pressing the "Select" button, the
 Change Device Name window will pop
 up. Then you will be taken to the
 setting page.
- ▲ The advertising state can not set parameters for the device.
- ▲User can press **t** to rescan OL0119 device.



Change Device Name

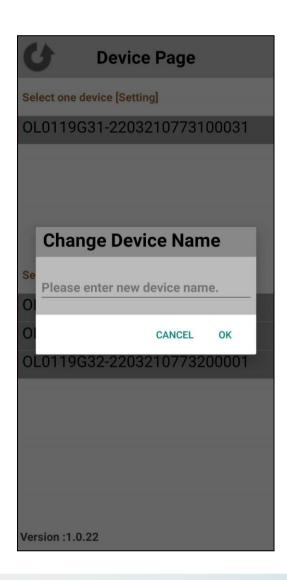


After pressing "Select", you can do the following:

- 1. Click the "Cancel" button:
 - If you wish to use current device name
- 2. Click the "OK" button:
 - If there is no text, the device name will revert to the device serial number.
 - If you enter new device name, the device name will be replaced.



Login Password

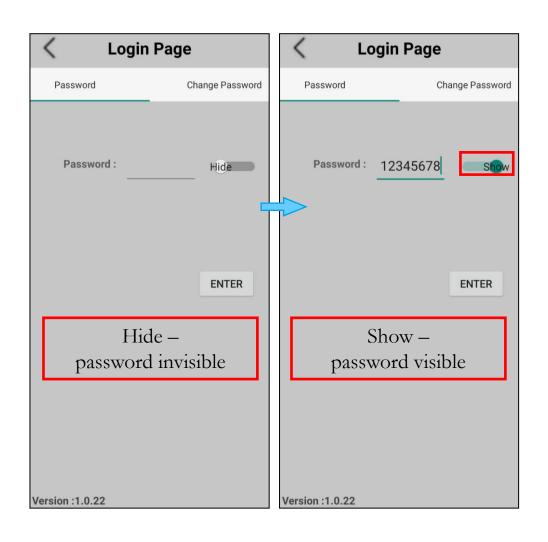


Login Password:

- 1. User needs an eight-character password to connect to the OL0119. (Default Password : 12345678)
- 2. Press "Enter" to connect OL0119 If the password is correct then you will be taken to the setting page.



Change Password

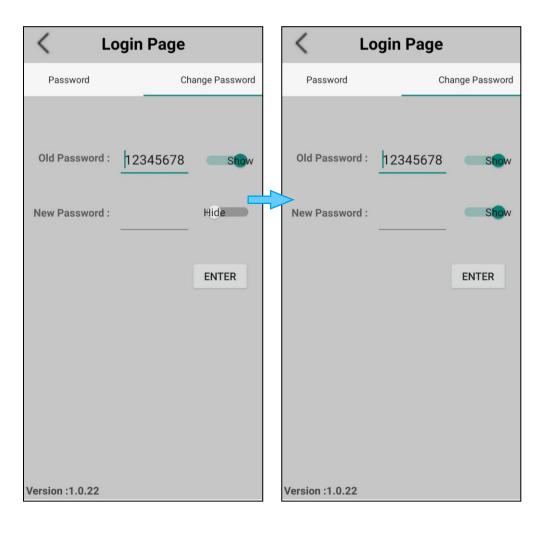


- 1. Old password : User needs enter the original password (Default Password : 12345678)
- 2. New password :
 User needs to enter new eight character password.
- 3. Press "Enter" to connect OL0119

 If the password is correct then user will be taken to the setting page.



Set Timeout

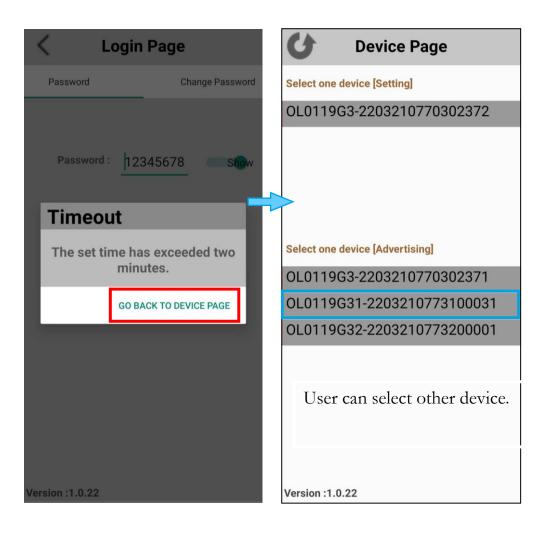


User has to complete the setting flow within two minutes. If the time is exceeded, a popup timeout window will appear.

After Timeout windows appears, if user still wants to set the parameters of the device, please restart the device and press to rescan OL0119 device.




Set Parameter

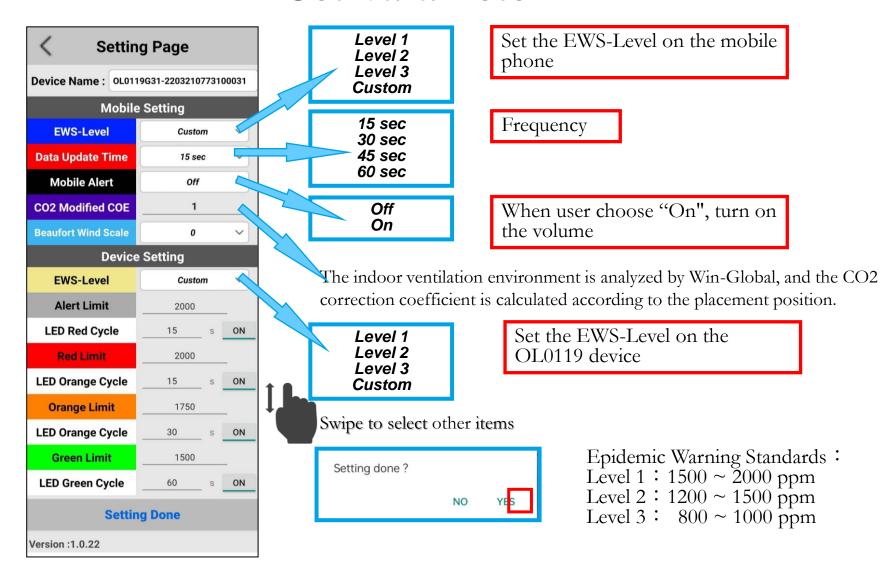



Set Parameter

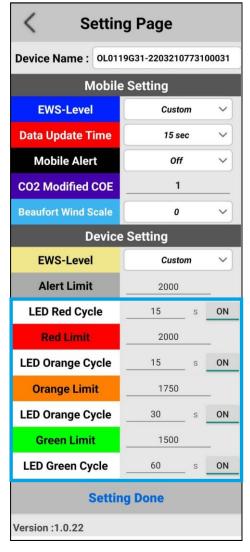

| < Setting |) Page | | | |
|--|--------|---|--|--|
| Device Name : 0L0119G31-2203210773100031 | | | | |
| Mobile Setting | | | | |
| EWS-Level | Custom | ~ | | |
| Data Update Time | 15 sec | ~ | | |
| Mobile Alert | Off | ~ | | |
| CO2 Modified COE | 1 | | | |
| Beaufort Wind Scale | 0 | | | |
| LED Red Cycle | 1 2 | | | |
| Red Limit | 3 | | | |
| LED Orange Cycle | 4 5 | | | |
| Orange Limit | 1750 | | | |

| | Beaufort scale | Name | Describe | |
|--|-------------------|--------------------|---|--|
| | 0 | Calm | m Smoke rises vertically | |
| | 1 | Light air | Direction shown by smoke drift; Still wind vanes | |
| | 2 | Light breeze | Leaves rustle; Wind vanes begin to move | |
| | 3 | Gentle breeze | Light flags extended ; Leaves and small twigs constantly moving | |
| | 4 | Moderate breeze | Light flags constantly waving; Dust, leaves, and loose paper lifted; Small tree branches move | |
| | 5 | Fresh breeze | Light flags constantly waving with sound ; Ripples on inland waters ; Small trees in leaf begin to sway | |

Setting Rules:

1. Green Limit < Orange Limit ≤ Red Limit


2. $600 \text{ s} \ge \text{Cycle Time} \ge 1 \text{ s}$

Device Setting:

RED Limit : $1000 \sim 3000$ ppm Orange Limit : $500 \sim 3000$ ppm Green Limit : $400 \sim 1500$ ppm Alert Limit : $400 \sim 3000$ ppm



Measurement Page - CO₂

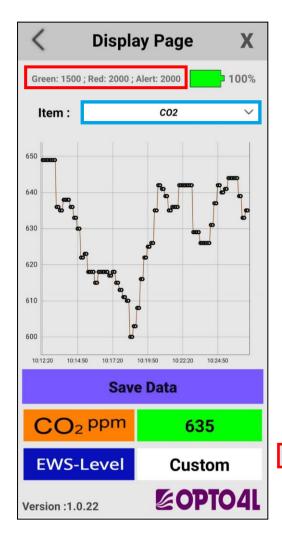

: Back to setting page

: Exit application

Save Data

: Save Data

100% : OL0119's power

Item: Select measurement item


CO₂ RH Temperature **WBGT**

Green: 1500 ; Red: 2000 ; Alert: 2000

The defined warning value for the model set by the user would be shown on the top.



Measurement Page - RH

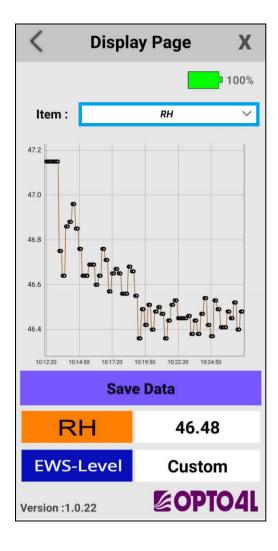

: Back to setting page

: Exit application

Save Data

: Save Data


100% : OL0119's power

Item: Select measurement item

CO₂ RH Temperature **WBGT**



Measurement Page - Temperature

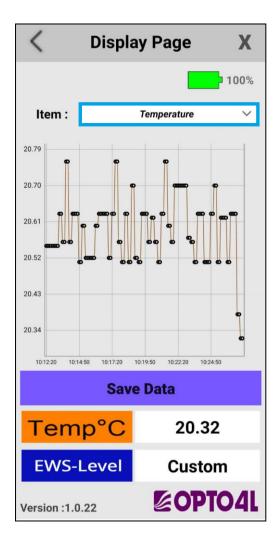

: Back to setting page

: Exit application

Save Data


: Save Data

100%: OL0119's power

Item: Select measurement item

CO₂ RH Temperature WBGT

Measurement Page - WBGT

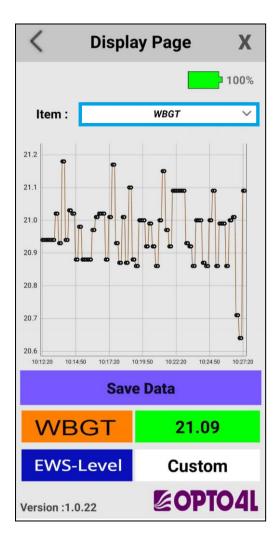

: Back to setting page

X : Exit application

Save Data : Save Data

100% : OL0119's power

Item: Select measurement item

CO2 RH Temperature WBGT

Please refer to WBGT classification and color-coding



Save Data

635

Custom

CO₂ ppm

EWS-Level

Version :1.0.22

Save Data



- 1. Yes, keep current data Save the current measurement. data and keep the data
- 2. Yes, delete current data Save the current measurement data and delete the data
- 3. No, don't save data No save action.

Storage Location: Internal Storage>Downloads> CO2 Ampel_Date.csv




Device Parameters Modification

- When OL0119 is under BLE broadcasting mode, a power reset is required if any user would like to modify the parameters within the device.
- When switch device, click on the Login or setting page, then one could scan OL0119 devices.







Exit App

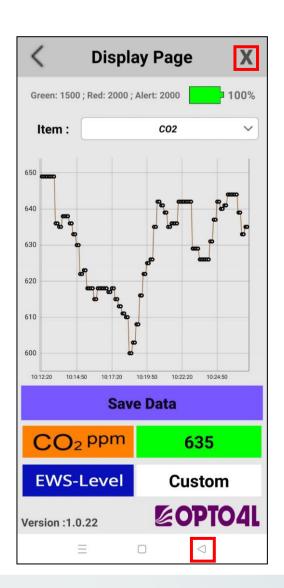

There are two way to exit the app:

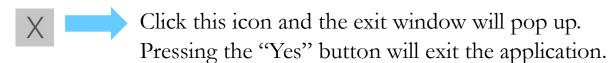

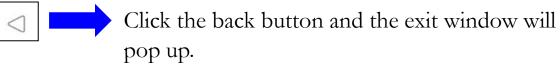


Pressing the "Yes" button will exit the application.





Epidemic Warning Standards EWS-Level CO₂ limit

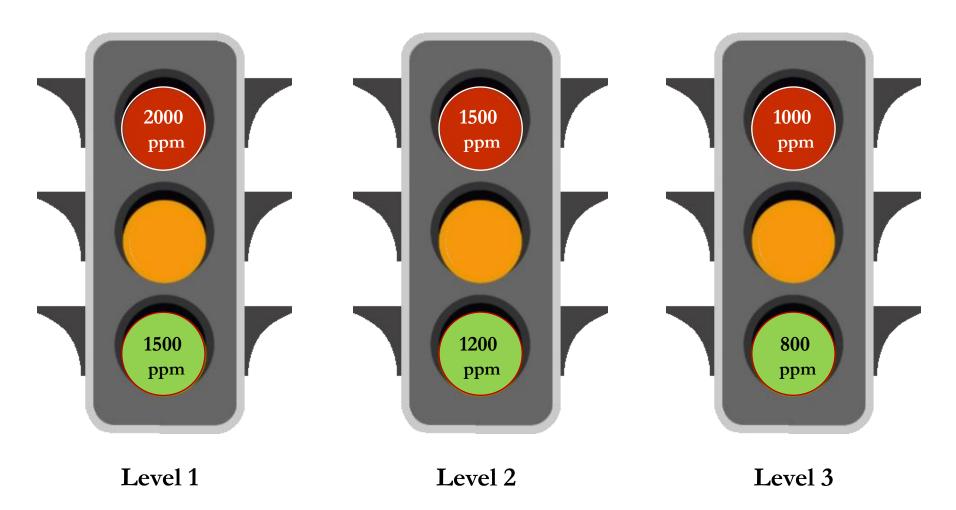

WBGT classification and color-coding

| WBGT | Level | Impact |
|----------|---------|--|
| > 40 °C | Danger | May cause muscle cramps, heat exhaustion; Prolonged exposure to the sun or intense activity can lead to heat stroke. |
| 32∼40 °C | Caution | Prolonged exposure to the sun or intense activity can lead to heat stroke. |
| 12~32 ℃ | Safe | None |
| 10~12 ℃ | Caution | May cause non-freezing cold injury. |
| ≦ 10 °C | Danger | May cause non-freezing cold injury; May cause frostbite or chilblains. |



Beaufort scale

| Beaufort scale | Name | Describe |
|----------------|--------------------|---|
| 0 | Calm | Smoke rises vertically |
| 1 | Light air | Direction shown by smoke drift; Still wind vanes |
| 2 | Light breeze | Leaves rustle ; Wind vanes begin to move |
| 3 | Gentle breeze | Light flags extended; Leaves and small twigs constantly moving |
| 4 | Moderate breeze | Light flags constantly waving; Dust, leaves, and loose paper lifted; Small tree branches move |
| 5 | Fresh breeze | Light flags constantly waving with sound; Ripples on inland waters; Small trees in leaf begin to sway |