

OL0119-G32 User Manual

version:1.0.22

Win-Global Technology





- □ OL0119 device introduction
- □ Set Location Permission
- Set Bluetooth And Storage Permission
- □ Connect to OL0119
- □ Change Device Name
- Login Password
- □ Change Password
- Set Timeout
- □ Set Parameter
- □ Measurement Page
- □ Save Data
- Device Parameters Modification
- Exit App
- □ EWS-Level
- □ Index for Air Quality(IAQ) classification and color-coding
- WBGT classification and colorcoding
- □ Beaufort scale



OL0119 device introduction

- Please turn on the power to charge, OL0119 will be shown with a green light. Key Function : Device off / Device on / 🗹 Device on and Mute Power display is viewed by APP
- The light matches the color range will continue to display When powered by USB.
- Battery Powered Mode (Factory Setting) The CO_2 concentration is within the range of the green light, the light is displayed every 60s. The CO_2 concentration is within the range of the yellow light, the light is displayed every 30s. The CO_2 concentration is within the range of the red light, the light is displayed every 15s.





Please choose on or \mathbf{v} when charging.

Continuous green light shows when charging. Working With Us Is Your Best Choice, We Are At Your Service !!

Set Location Permission (1)



、雾尘 四 股份有限公司

15:20 🖸	© III \$\$ ₩I 85)
\leftarrow Location	
Location	
POSITIONING CONTROL	
Wi-Fi and Bluetooth scannin	g >
G Emergency Location	Service >
G Google Location Accu	uracy >
G Google Location Histo	ory >
=	\triangleleft

- If GPS function is not enabled, a popup window will appear. Please press the "OK" button.
- 2. After pressing the "OK" button, you will be taken to this page.Please enable GPS function.

Note: For device with Android 10 or higher version, GPS must be turned on for Bluetooth to work.

Set Location Permission (2)

1. When the location access permissions appear, select "Precise" and click "While using the app".

摆 光 西 股份有限公司



2. When location access appears, you should change to use "Precise" for GPS to turn on successfully.





Allow CO2 Ampel to find, connect to, and determine the relative position of nearby devices?	I [
Allow	
Don't allow	
"CO2 Ampel" wants to turn on Bluetooth	I I
DECLINE ALLOW	
	1
Allow CO2 Ampel to access photos, media, and files on your device?] [
🔲 Don't ask again	
1 of 2 DENY ALLOW	

四 股份有限公司

Please press the "Allow" option. (Bluetooth scan permission) For Android 12 or higher]

If Bluetooth function is not enabled, a pop-up window will appear. Please press the "Allow" option.

Please press the "Allow" option. (Storage permission) [For Android 10 and below]



77: 罢 光 西 股份有限公司





C	5	Device	Page	
Sel	ect one de	vice [Setting	9]	
OL	.0119G3	32-22032	107732	00180
	Chang	ge Devid	ce Nam	е
Se	Please e	nter new d	evice nam	e.
0				
0			CANCEL	ок
OL	.0119G3	35-22032	107703	12345
Vers	sion :1.0.2	2		

After pressing "Select", you can do the following :

- 1. Click the "Cancel" button :
 - If you wish to use current device name
- 2. Click the "OK" button :
 - If there is no text, the device name will revert to the device serial number.
 - If you enter new device name, the device name will be replaced.

Login Password



77 遥光面股份有限公司

Login Password :

- User needs an eight-character password to connect to the OL0119. (Default Password : 12345678)
- 2. Press "Enter" to connect OL0119 If the password is correct then you will be taken to the setting page.

Change Password



7 遥光 面 股份有限公司

1. Old password : User needs enter the original password (Default Password : 12345678)

2. New password :

User needs to enter new eight character password.

3. Press "Enter" to connect OL0119 If the password is correct then user will be taken to the setting page.



Set Timeout



User has to complete the setting flow within two minutes. If the time is exceeded, a popup timeout window will appear.

After Timeout windows appears, if user still wants to set the parameters of the device, please restart the device and press to rescan OL0119 device.



Set Parameter



Set Parameter - Custom

< Settin	g Page		
Device Name : OL011	9G31-22032107	7731(00031
Mobile	Setting		
EWS-Level	Custor	n	~
Data Update Time	15 se	0	~
Mobile Alert	Off		~
CO2 Modified COE 1			
Beaufort Wind Scale 0		~	
Device	Setting		
EWS-Level	Custor	n	~
Alert Limit	2000		_
LED Red Cycle	15	S	ON
Red Limit	2000		_
LED Orange Cycle	15	s	ON
Orange Limit	1750		_
LED Orange Cycle	30	S	ON
Green Limit	1500		_
LED Green Cycle	60	s	ON
Setting Done			

摆 光 面 股份有限公司

< Settin	g Page
Device Name : 0L011	9G31-2203210773100031
Mobile	Setting
EWS-Level	Custom V
Data Update Time	15 sec 🗸 🗸
Mobile Alert	0ff ~
CO2 Modified COE	1
Beaufort Wind Scale	0
LED Red Cycle	1 2 _
Red Limit	3
LED Orange Cycle	4 5
Orange Limit	1750

		Beaufort scale	Name	Describe
>00031		0	Calm	Smoke rises vertically
		1	Light air	Direction shown by smoke drift ; Still wind vanes
		2	Light breeze	Leaves rustle ; Wind vanes begin to move
	~	3	Gentle breeze	Light flags extended ; Leaves and small twigs constantly moving
		4	Moderate breeze	Light flags constantly waving ; Dust, leaves, and loose paper lifted ; Small tree branches move
		5	Fresh breeze	Light flags constantly waving with sound ; Ripples on inland waters ; Small trees in leaf begin to sway

Setting Rules : 1. Green Limit < Orange Limit \leq Red Limit 2. 600 s \geq Cycle Time \geq 1 s Device Setting : RED Limit : 1000 ~ 3000 ppm Orange Limit : 500 ~ 3000 ppm Green Limit : 400 ~ 1500 ppm Alert Limit : 400 ~ 3000 ppm



Measurement Page - CO_2



VOC IAQ WBGT The defined warning value for the model set by the user would be shown on the top.

CO2

RH



Measurement Page - RH



- **K** : Back to setting page
- X : Exit application



- : Save Data
- 100% : OL0119's power
 - Item : Select measurement item



Measurement Page - Temperature



- K : Back to setting pageX : Exit application
- Save Data
 - : Save Data
 - 100% : OL0119's power
 - Item : Select measurement item





Measurement Page - VOC





Item : Select measurement item





Measurement Page - IAQ





RH

Temperature

VOC

IAQ

WBGT



Measurement Page - WBGT





Please refer to WBGT classification and color-coding



Save Data



- Yes, keep current data Save the current measurement data and keep the data
- 2. Yes, delete current data Save the current measurement data and delete the data
- 3. No, don't save data No save action.

Storage Location : Internal Storage>Downloads>CO2 Ampel_Date.csv



Device Parameters Modification

- When OL0119 is under BLE broadcasting mode, a power reset is required if any user would like to modify the parameters within the device.
- When switch device, click on the Login or setting page, then one could scan OL0119 devices.

Login Page

兴罢 平 四 股份有限公司

Setting Page



Exit App



There are two way to exit the app :

Click this icon and the exit window will pop up.
Pressing the "Yes" button will exit the application.

Click the back button and the exit window will pop up.

Pressing the "Yes" button will exit the application.

Quit app ?		
	NO	YES



Epidemic Warning Standards EWS-Level CO₂ limit





Index for Air Quality(IAQ) classification and color-coding

IAQ Index	Air Quality	Impact (long-term exposure)	Suggested action
> 200	Severely polluted	More severe health issue possible if harmful VOC present	Contamination should be identified if level is reached even w/o presence of people; maximize ventilation & reduce attendance
101 – 200	Moderately polluted	More significant irritation possible	Increase ventilation with clean air
0 - 100	Good	Pure air; best for well-being	No measures needed



WBGT classification and color-coding

WBGT	Level	Impact
> 40 °C	Danger	May cause muscle cramps, heat exhaustion ; Prolonged exposure to the sun or intense activity can lead to heat stroke.
32∼40 °C	Caution	Prolonged exposure to the sun or intense activity can lead to heat stroke.
12∼32 ℃	Safe	None
10~12 ℃	Caution	May cause non-freezing cold injury.
\leq 10 °C	Danger	May cause non-freezing cold injury ; May cause frostbite or chilblains.



Beaufort scale

Beaufort scale	Name	Describe
0	Calm	Smoke rises vertically
1	Light air	Direction shown by smoke drift ; Still wind vanes
2	Light breeze	Leaves rustle ; Wind vanes begin to move
3	Gentle breeze	Light flags extended ; Leaves and small twigs constantly moving
4	Moderate breeze	Light flags constantly waving ; Dust, leaves, and loose paper lifted ; Small tree branches move
5	Fresh breeze	Light flags constantly waving with sound ; Ripples on inland waters ; Small trees in leaf begin to sway